

FINE CONTROLS (UK) LTD



Fine Controls have been supplying process controls & instrumentation equipment since 1994, & now serves an ever expanding customer base, both in the UK & globally.

We offer a full range of valve & instrumentation products & services, with our product range representing leading technologies & brands:

Flow: Flow Meters & Transmitters, Flow Switches, Flow Control Valves & Batch Control Systems

Temperature: Temperature Probes & Thermowells, Temperature transmitters, Temperature Regulators & Temperature Displays

Level: Level Transmitters & Switches

Pressure: Pressure Gauges & Transmitters, Precision & High Pressure Regulators & I-P Converters, Volume boosters.

Precision Pneumatics: Pressure Regulators, I-P Converters, Volume Boosters, Vacuum Regulators

Valves: Solenoid & Pneumatic Valves, Control Valves & Positioners, Actuated Ball, Globe or Diaphragm Valves & Isolation Valves

Services: Repair, Calibration, Panel Build, System Design & Commissioning

A rotork® Brand
FAIRCHILD



bürkert



SIEMENS



alcon
SOLENOID VALVES

A rotork® Brand



MIDLAND-ACS
A rotork® Brand



Honeywell



Bourdon
Baumer Group



SOLDO
CONTROLS

A rotork® Brand



Fine Controls (UK) LTD, Bassendale Road, Croft Business Park,
Bromborough, Wirral, CH62 3QL UK
Tel: 0151 343 9966
Email: sales@finecontrols.com

English

Range of application for the pressure transmitter type 8316

The pressure transmitter is used to measure relative and absolute pressure of liquid and gases.

The pressure transmitter consists of a piezoresistive ceramic measuring cell with a diaphragm, installed in a stainless steel housing. This transmitter is available with various connector types, IP protection standards as well as current- and voltage outputs.

Installation

- The location of the device has no influence on the precision of the measurement.
- Before installation, compare the process data with the data of the name plate.
- The medium being measured must be suitable for the parts of the pressure transmitter in contact with the medium.
- Connect the devices to a fixed cable installation.
- The devices may only be installed, connected, set-up and operated by qualified staff and in compliance with the technical specifications.

Safety instructions

In terms of a safety-instrumented system, this device left the factory in perfect condition. To maintain this status and to ensure safe operation of the device, observe the following notes:



The device may only be used for the purposes specified in these instructions.

- When connecting up, installing and operating the device, the directives and laws of your country apply.
- The device is not used properly, serious bodily injury and/or considerable damage to property cannot be excluded. This should be kept in mind particularly when the device was in use and is replaced.
- The transmitter is preset to the specific measuring range at the manufacturer's plant. An additional setting is not possible.
- The overload limit should be monitored and kept to at all times.
- The transmitter is maintenance-free.
- Connect the device to a low voltage power supply with safe separation (SELV).

Tests / Admissions

 
Electromagnetic compatibility:	CE conformity acc. EN 61326-2-3
Shock acc. IEC 60068-2-27:	25 g, 6 ms half sine wave, all 3 directions.
Drop test EN 60068-2-23:	from 1 m on concrete
Vibration acc. IEC 60770-1:	5 m/s, 10 ... 1000 Hz, 1 Octave/min 20 constant load per axis

Electrical Connection


2 wire

3 wire

Connector DIN EN 175301-803-A or -C




1 (IN) 2 (OUT)

 


1 (IN) 2 (OUT) 3 (GND)

¹⁾ Not connected with transmitter housing

 Swift connector

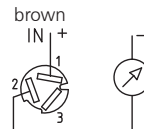


OUT green
1 (IN) 2 (OUT)

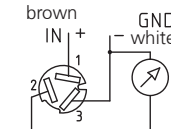 


OUT green
1 (IN) 2 (GND) 3 (OUT)

 Metri Pack Serie 150



B (IN) A (OUT)

 


B (IN) C (OUT) A (GND)


2 wire

3 wire

 
Connector M12x1




1 (IN) 3 (OUT)

 

1 (IN) 4 (OUT) 3 (GND)

 


1 (IN) 4 (OUT)

 


1 (IN) 3 (OUT) 4 (GND)

 
Connector RAST 2.5

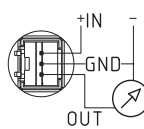

Braids

 

blue

 

black

blue

Français

Domaine d'utilisation du transmetteur de pression type 8316

Le transmetteur de pression est utilisé pour la mesure de pression relative et absolue de gaz et de liquides.

Le transmetteur de pression est composé d'une cellule de mesure céramique piézorésistive dont la membrane est montée dans un corps en inox. Le transmetteur de pression est livré avec diverses connectiques, indices de protection et signaux de sortie.

Montage

- La position de montage n'a pas d'incidence sur la précision.
- Vérifier avant montage si les paramètres du process correspondent aux données marquées sur le corps du capteur.
- Le fluide utilisé doit être compatible aux matières du capteur en contact avec celui-ci.
- Veiller à raccorder les capteurs avec des câbles solides
- Les appareils de cette série de transmetteurs ne doivent être utilisés que par du personnel qualifié et uniquement suivant les données techniques.

Consignes de sécurité

Cet appareil a quitté l'usine dans un parfait état de sécurité. Afin de conserver cet état et assurer une utilisation sans danger, veuillez tenir compte des consignes suivantes :



L'appareil ne doit être mis en œuvre que pour l'utilisation décrite dans cette notice.

- Lors du raccordement, montage et utilisation, les règles et les lois en vigueur dans votre pays doivent être respectées.
- En cas d'utilisation inappropriée de cet appareil, des blessures corporelles graves et/ou des dégâts matériels importants ne peuvent être exclus. Ce point est notamment valable lorsque l'appareil était en fonction et qu'il est remplacé.
- Le transmetteur de pression est ajusté en usine à sa plage de mesure. Un réglage a posteriori n'est pas possible.
- La surpression admissible doit toujours être vérifiée et respectée.
- Le transmetteur de pression est sans entretien.
- Raccordez le transmetteur à une alimentation basse tension avec une isolation sûre (SELV).

Tests et homologations

 
Compatibilité électromagnétique: Conformité CE selon EN 61326-2-3

Choc selon EN 60068-2-27: 25 g, 6 ms onde demi-sinus, 3 directions.

Chute libre selon EN 60068-2-23: 1 m sur béton



Vibrations selon EN 60770-1: 50 m/s, 10 ... 1000 Hz, 1 octave/min. 20 sollicitations par axe

Connexions électriques


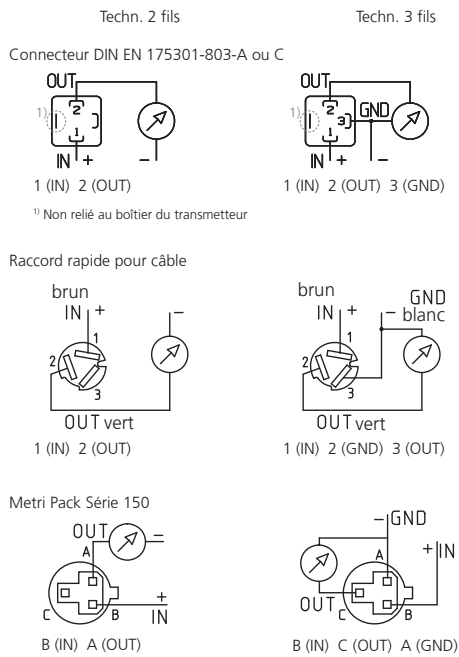


Techn. 2 fils

  
Connecteur M12x1

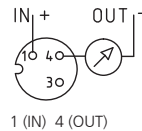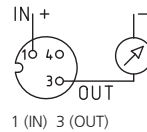



Techn. 3 fils

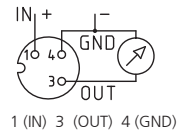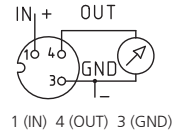  

Connecteur RAST 2.5

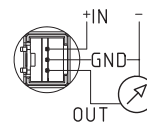 

Sortie fils

  

bürkert
FLUID CONTROL SYSTEMS

BÜRKERT S.A.S
Rue du Giessen
B.P. 21
F 67220 TRIEMBACH AU VAL
Téléphone +33 (0) 388 58 91 00
Téléfax +33 (0) 388 57 09 61
www.burkert.com